


M A N U A L

Filterbollsbyte

-FILTER BALLS REPLACEMENT

HUR DU BYTER FILTERBOLLAR I
DITT FILTER

For English see page eight

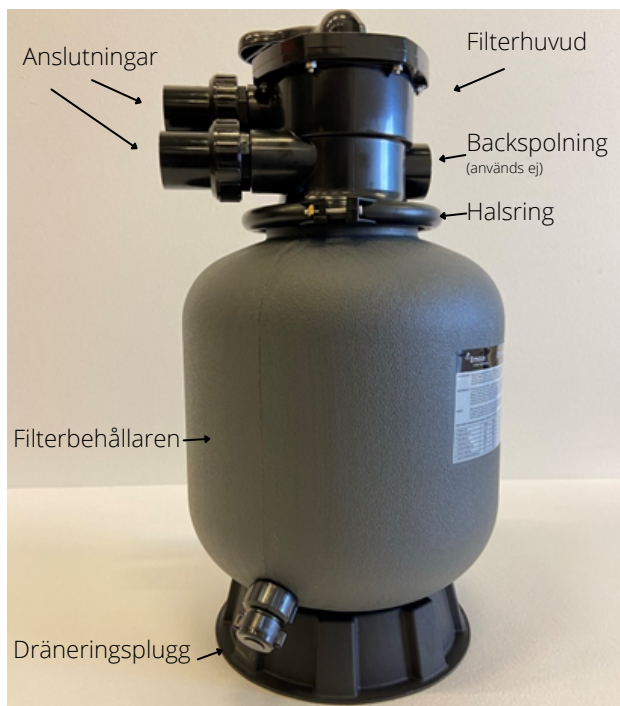

Filterbytet

1. Stäng av strömmen till systemet. Alternativt sätt systemet i holdläge. Läs under pausa systemet i display manualen. Systemet är då pausat i en timme.

2. Stäng båda skjutventilerna. Om du har ett system med en skjutventil och en plutt så stäng skjutventilen och sätt i plutten i anslutningen.



Skjutventil i öppetläge




Skjutventil i stängtläge

Plutt



3. Töm ur allt vatten ur filterbehållaren via bottenpluggen. Obs skruva inte av hatten helt utan försiktigt tills lagom med vatten flödar ut.

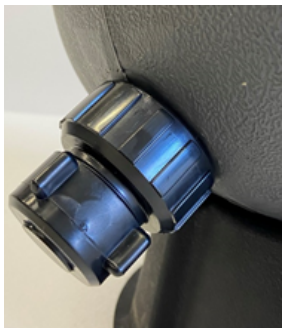


4. Skruva av båda kopplingarna från filterhuvudet (håll koll på o-ringarna som sitter i kopplingarna).



5. Lyft upp hela filterbehållaren ur tekniklådan obs! lyft inte i filterhuvudet då handtaget kan gå av. Använd båda händerna och lyft filtret i filterbehållaren.



6. Skruva av halsringen på filterbehållaren och ta av filterhuvudet.

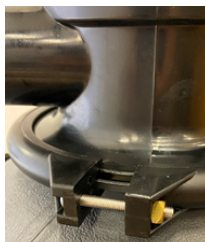

7. Häll ut filterbollarna och rengör dysan genom att skruva av locket och rengöra med en ren trasa.




8. Skruva tillbaka locket på dysan. Sätt tillbaka dysan i filterbehållaren, håll sedan i rena filterbollar i filterbehållaren, håll en hand för röret så ingen filterboll hamnar i röret.

Filterbollarna kan rengöras genom att tvättas. Du kan tvätta dem i en tvättpåse i 40 grader med vanligt tvättmedel. När filterbollarna blir hårda eller trådiga behöver de slängas. Filterbollarna behöver vara helt torra innan de används igen.



9. Sätt tillbaka filterhuvudet på filterbehållaren, var noggrann med att röret centrerar i filterhuvudet. Dysan skall vara kvar i filterbehållaren när filterhuvudet monteras. Skruva sedan på halsringen.

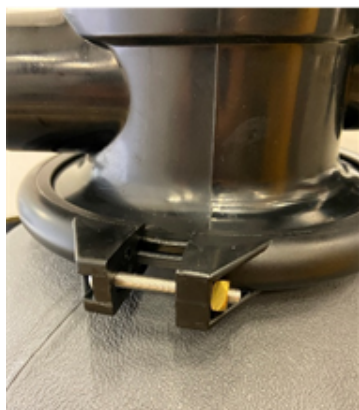

10. Lyft i filterbehållaren i tekniklådan. Lyft ej i filterhuvudet utan lyft i filterbehållaren. Skruva sedan tillbaka båda anslutningarna. Tänk på att o-ringen ska sitta på plats.



11. Innan du öppnar skjutventilerna och tar bort eventuell plutt, kontrollera att bottenpluggen på filtret är monterad och åtdragen.




12. Se till att filterhandtaget är vridet till filterläge.

13. Slå nu på strömmen till systemet. Alternativt avbryt hold läget genom att trycka på meny knappen.




-FILTER BALLS REPLACEMENT

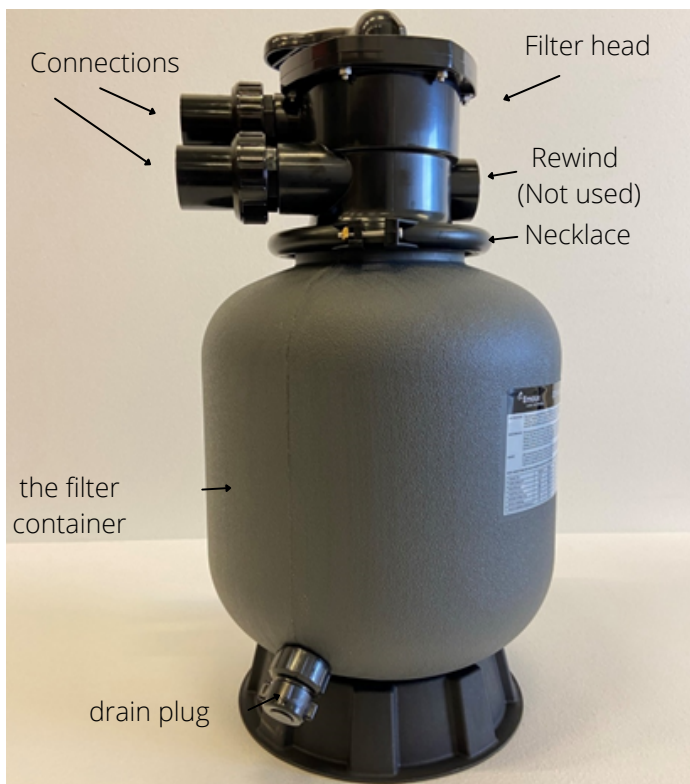

The filter change

1. Turn off the power to the system. Alternatively, put the system in hold mode. Read under the pause system in the display manual. The system is then paused for one hour.

2. Close both gate valves. If you have a system with a gate valve and a plug, close the gate valve and insert the plug into the connection.

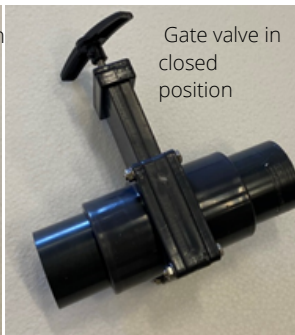

Plug



3. Drain all water from the filter holder via the bottom plug. Note: Do not unscrew the cap completely, but carefully until enough water flows out.



4. Unscrew both couplings from the filter head (keep an eye on the o-rings that are in the couplings).



5. Lift the entire filter container out of the technology box. Note! do not lift the filter head as the handle may come off. Use both hands, lift the filter into the filter container.



6. Unscrew the neck ring on the filter container and remove the filter head.



7. Pour out the filter balls and clean the nozzle by unscrewing the cap and cleaning with a clean cloth.




8. Screw the cap back on the nozzle. Put the nozzle back into the filter container. Then pour in clean filter balls into the filter container. Hold the pipe with one hand so that no filter ball ends up in the pipe.

The filter balls can be cleaned by washing. You can wash them in a laundry bag at 40 degrees with normal detergent. When the filter balls become hard or stringy, they need to be thrown away. The filter balls need to be completely dry before they are used again.




9. Put the filter head back on the filter container. Be careful that the tube centers in the filter head. The nozzle must remain in the filter container when the filter head is mounted. Then screw on the neck ring.

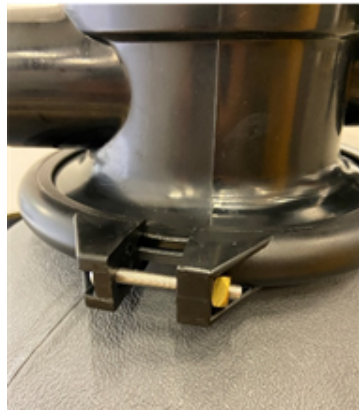

10. Lift the filter container in the technology box. Do not lift the filter head but lift the filter container. Then screw both connections back. Remember that the o-ring must be in place.



11. Before opening the slide valves and removing any sludge, check that the bottom plug on the filter is installed and tightened.

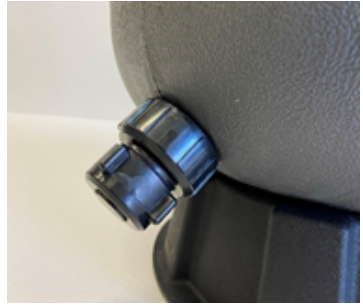

12. Make sure the filter handle is turned to the filter position.



13. Now turn on the power to the system. Alternatively, cancel hold mode by pressing the menu button.

