

# Change the Capacitor

---

## Step 1:

Unscrew the 4 screws on the lid.

## Step 2:

Remove the lid from the pump.

## Step 3:

Detach the capacitor from the metal holder.

## Step 4:

Disconnect the 3 wires from the capacitor by pulling on the pins, not the wires.

## Step 5:

Connect the wires to the new capacitor according to the diagram.

## Step 6:

Press the new capacitor into the metal holder.


## Step 7:

Reattach the lid.

## Step 8:

Screw the screws back in.

1

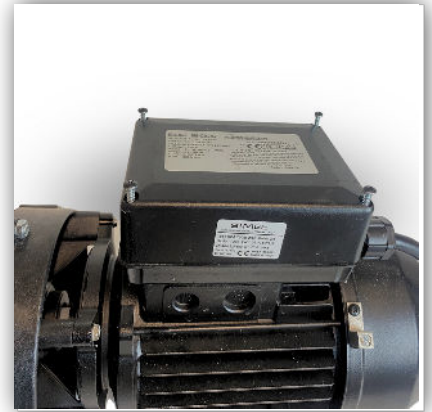

2




3



4 - 5



8

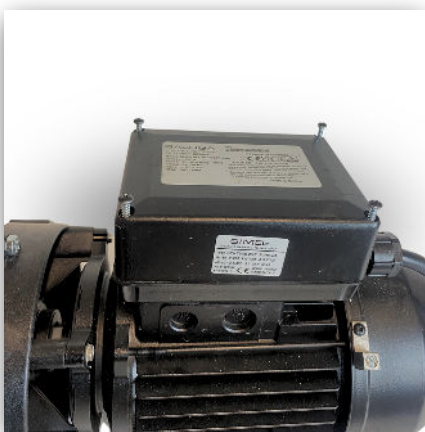

7

